
α ALPHA ANTENNA®

Model – 100W Alpha Loop Operating Manual, Version 6.0, October 10, 2019

Operation

The model 100W Alpha Loop is a 10-40 Meter transmit/receive antenna, which handles 25 Watts Digital, 50 Watts CW, and 100 Watts PEP SSB.

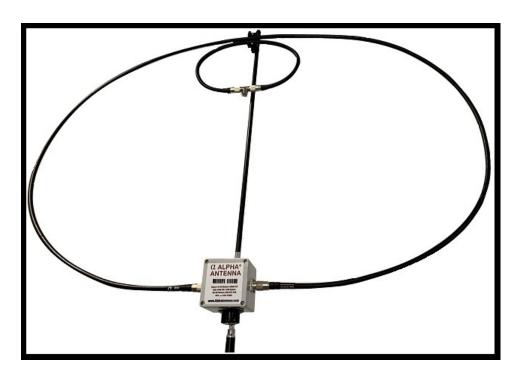

Excess RF Exposure Warning

In the United States, the Federal Communications Commission has established guidelines for human exposure to Radio Frequency (RF) electromagnetic fields no matter what the antenna type. The commission's requirements are detailed in parts 1 & 2 of the FCC's rules and regulations {47 CFR, 1.1307(b), 1.1310, 22.1091, 2.1093}. It is the responsibility of the owner/operator of this device to follow all applicable warnings and precautions regarding human exposure to RF fields. Additional interference with other electrical devices can occur. Additional reference: http://www.arrl.org/rf-exposure

Support Contacts

If you have questions about your antenna, please feel free to contact us.

Email: support@alphaantenna.com - Phone: 1-888-482-3249

WEB: www.alphaantenna.com - Video Tutorials: www.YouTube.com/AlphaAntenna

Assembly

CALPHA ANTENNA®

Screw the tripod onto the bottom of the grey Alpha Match.	
Screw the tripod onto the bottom of the grey Aipha Matth.	
Screw the center support pole onto the top of the grey Alpha Match box.	
Install the rubber grommet over the pole.	
	Marketine, -
Locate the Clip with two openings: Slide the clip with two openings onto the top of the support pole.	
Locate the <u>large Coaxial feed Loop</u> : Center and insert the large Coaxial feed Loop snuggly into the top 'slot' of the Clip with the two openings. Locate the <u>small Coaxial feed Loop</u> : Insert the small Coaxial feed Loop snuggly into the bottom 'slot' of the Clip with the two openings.	
Attach the PL259 connectors on the outer Coaxial loop to the grey box: Attach the PL-259 connectors on the larger Coaxial Loop Element to the SO-239 connectors on the grey Alpha Match box.	
Attach your coax: Connect your PL259 to the T-Connector on the small inner loop, and then run your coax to your equipment. (NOTE – There is an extra T-Connector included).	
<u>Tuning</u> : Start with <i>MINIMUM</i> power & select your frequency, then turn the black knob on the grey Alpha Match till your rigs meter peaks with the loudest audible noise floor. Second, watch your SWR meter to dip follow the next step to 'Fine Tune' if you so desire.	Optional 40-80M Booster Cable The Booster cable enables 20W PEP SSB on
<u>Fine Tune</u> : Slide the Inner loop up or down the center support pole while monitoring for the lowest SWR on an inline SWR meter, your rigs SWR meter, or an antenna analyzer, as you change the distance between the loops.	40/60/80M & installs in Series with the 10-40M outer loop, and clips into the bottom opening of
BEFORE increasing your power to 100W, please ensure your SWR is optimally tuned.	the clip with 2 openings.

CALPHA ANTENNA®